
ENCHEN – A7 Plus 英文说明书
技术要求 说明书 风琴页
尺寸：60*84 mm
材质：105g哑粉纸
印刷要求:
1. 色相准确，印迹牢固、套印准确、各色套印、不露杂色
2. 页码符合要求，装订正确，不得多页或少页
3. 装订不得有生锈、氧化不良
4. 颜色及专色: Pantone cool gray 11C
5. 工厂制版前按照实际需求添加空白页

84 mm

3-IN-1 ELECTRIC TRIMMER

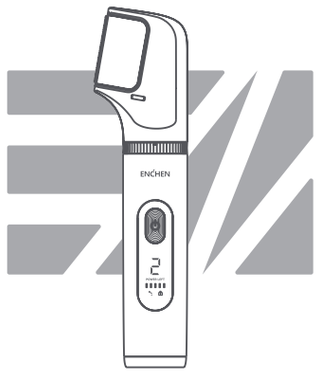

A7 Plus-User Manual

* For safety issue, the Product's battery status remains low during transporting.
Please fully charge the Product before initial use!

IMPORTANT NOTES

Please read the following safety notes carefully and abide by all routine preventive measures for safety.


Warning

1. This Product is not intended for use by young children or infirm persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a responsible person concerning use of grooming kit to ensure that they can use it safely.
2. This Product and its accessories are not toys. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the Product.
3. Please use this Product for the correct purpose. This Product is not suitable for pet.
4. Do not immerse this Product in water to charge, and do not charge it in a humid environment. Keep the Product dry after using it.
* The right symbol indicates that the Product can be cleaned under a running tap.
5. The Product contains a built-in rechargeable battery. Do not drop it into fire and never charge, use or place it at the place where temperature is high.

Notice

1. Do not drop or knock this Product. If this Product is damaged as a result of dropping or collision, do not use it again.
2. Do not try to fix or disassemble the Product by yourself.
3. If this Product does not operate properly, please submit it to the seller or the authorized service center for inspection.

PROFILE OF PRODUCT

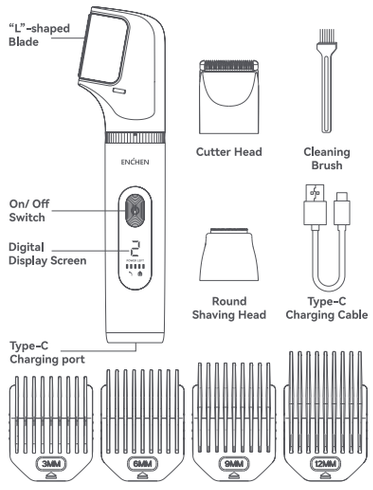

Guide Comb x4 (3/6/9/12 mm)

TRAVEL LOCK

The trimmer is equipped with a travel lock function to prevent it from accidentally powering on in the luggage.

1. **To activate travel lock,** press and hold the On/off Switch for three seconds while trimmer is OFF, then travel lock indicator will twinkle.
2. **To deactivate the travel lock,** press and hold On/off Switch for three seconds under locking status, then the trimmer is unlocked.

2-SPEED ADJUSTMENT

The trimmer is upgraded with 2-level trimming speeds (5500-6500)RPM to meet your different needs.

* Within 5 seconds after switching the trimmer on, short press Power Switch to change trimming speeds.

GUIDED BLADE USAGE



"L"-shaped Blade
This head is mainly used on the elbows, legs, neck and back.

Round Shaving Head
Shavable fine and soft hair with coarse hair roots of less than 0.3mm.

Cutter Blade
This head is designed for trimming large areas of body hair,such as leg hair, arm hair, underarm hair, and private areas.


CLEANING AND MAINTENANCE



1. Remove the guide comb, and push the trimmer blade downwards to unload the blade.
2. The trimmer can be washed under running water.
3. Clean the trimmer blade and hair collection part with cleaning brush.
4. The hair collection place can also be directly washed under running water (better if warm water is used).


60 mm

DETACHING AND ATTACHING TOOL HEADS

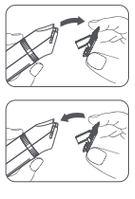

1. To detach a tool head, place the trimmer with the blades up and press on the upper edge of the blade with your thumb.
2. To attach a tool head, first insert the lug of the trimming head into the guiding slot at the front and then carefully press on the upper edge of the blade to lock it ('click').

ATTACHING AND DETACHING LIMIT COMBS

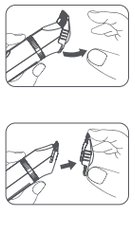

1. To attach any type of limit combs onto a tool head, slide the front part of the limit comb onto the teeth of the trimming head. Then push down the center of the guard with your fingers or the palm of your hand ('click').
2. To detach any type of limit combs from the tool head, carefully pull its back part off the product and then slide it off the trimming head.

CHARGE YOUR TRIMMER

1. Before charging, be sure to turn off the trimmer.
2. Connect the Type-C charging cable to the trimmer and the Adapter, then plug the adapter into the 100-240VAC power outlet.
* 5V/1A Adapter shall be used.
3. The trimmer is equipped with a 5-level battery indicator. When charging, the indicator lights flash sequentially from left to right (1→2→3→4→5→repeat). It will be fully charged in approximately 2 hours, after which all 5 battery level indicators will stay on.
4. Alternatively,you can connect the charging cable to the trimmer and the USB port for charging.

Notice

1. When battery status is low, the battery indicator will flash to remind you of charging.
2. If the trimmer will not be used for a long time, please fully charge the trimmer at least once every half a year.
3. It can provides 90 mins of cordless trimming time after 2 hours of charging.

PRODUCT PARAMETERS

Product name: Electric Trimmer
Model: A7 Plus
Input: 5V⎓1A
Charging time: 2 hours

STEPS FOR USING

In order to get the best trimming effect, please keep your hair clean and smooth before trimming.

Step 1
Install appropriate head match your different needs.

Step 2
Press the ON/OFF switch to turn on the trimmer,and short press again for speed 2.

Step 3
Just place the trimmer on your skin and move it against the direction of hair growth.

Step 4
Press the ON/OFF switch to turn off the trimmer.

PRODUCT WARRANTY CARD

Name :	
Address :	
Tel. No. :	
Date of purchase : (dd/mm/yy)	
Store name :	
Warranty period :	

WARRANTY TERMS & CONDITIONS

* All quality-related defects on items sold directly by ENCHEN or ENCHEN's authorized resellers are covered by an extensive warranty, starting from the date of purchase.
* ENCHEN's limited warranty is restricted to the country of purchase. The limited warranty is void on items taken outside the country they were originally bought in or shipped to directly from an authorized online purchase.
* This warranty covers only original ENCHEN products. It is not applicable to normal wear and tear, or any defects arising from damage caused by misuse of this product.
* Warranty is for the primary product only nor transferable. Any free additional product(s) are not covered in this warranty.
* If the product fails regardless of usage in compliance with the user manual and other written precaution, replacement will be provided free of charge.
* To claim the warranty, contact the services team from the platform or store where you bought from.

✉ **Email:** export@enchen.cn

BATTERY DISPOSAL INSTRUCTION

1. Please take the battery out from the appliance first before discarding it.
2. Please make sure that the appliance is powered off before taking out the battery.
3. The battery should be disposed safely.

ENCHEN

Shanghai Qiaopusi Smart Sci-Tech Development Co.,Ltd.
Add: Room 103,3th Bld,No.320 Donglan Rd,Minhang District,Shanghai,China
Made in China